



## Downstairs TV System using Osiris Remote:

To turn on:

Point at TV and press ON button

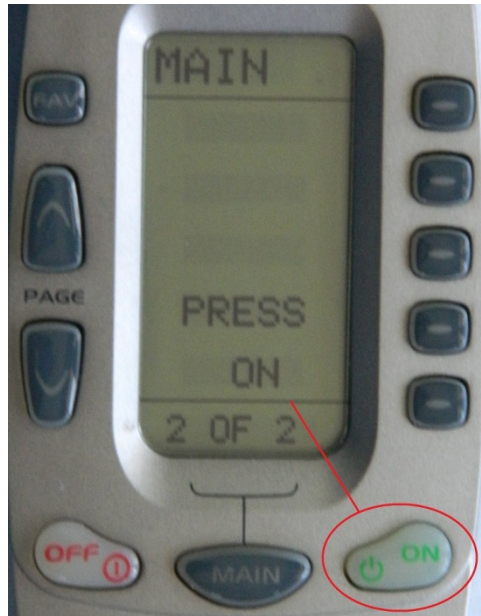


System will automatically turn all devices on and default to DirecTV

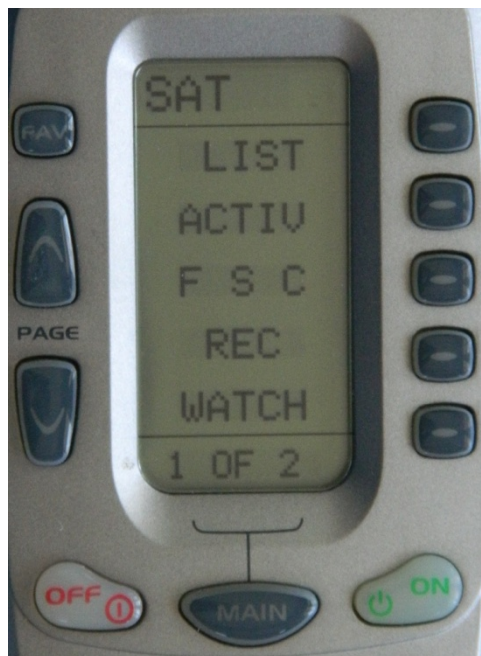

To turn system off:

Press OFF button

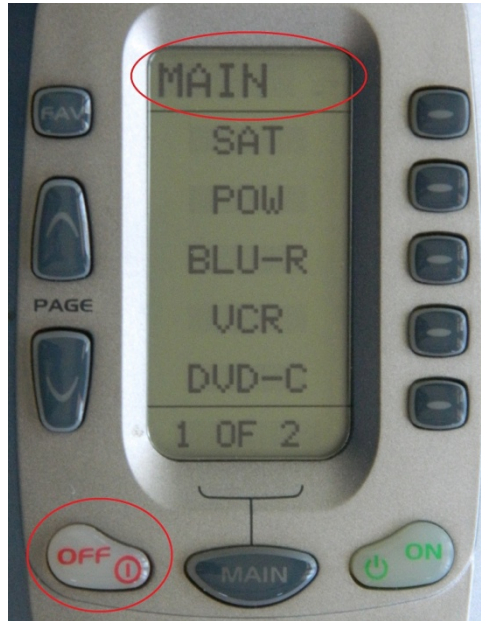


Remote does not need to be on MAIN Page for this to work. All devices should automatically turn off.

Controlling Devices:  
To get to MAIN Page press MAIN button




Once on MAIN Page select device to watch. System will automatically switch.

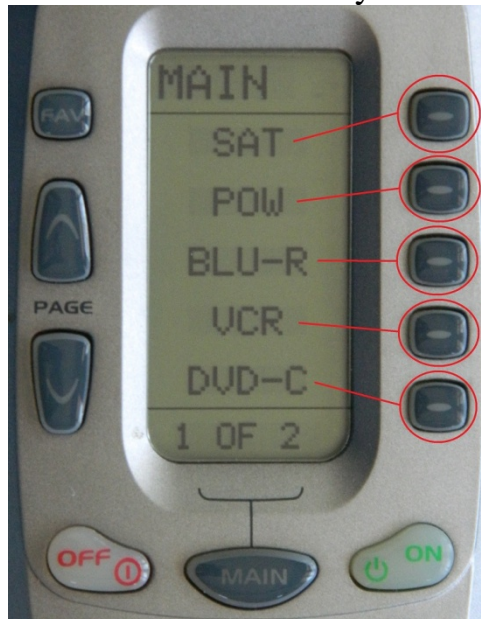

SAT(DirecTV) Page:



Goes to

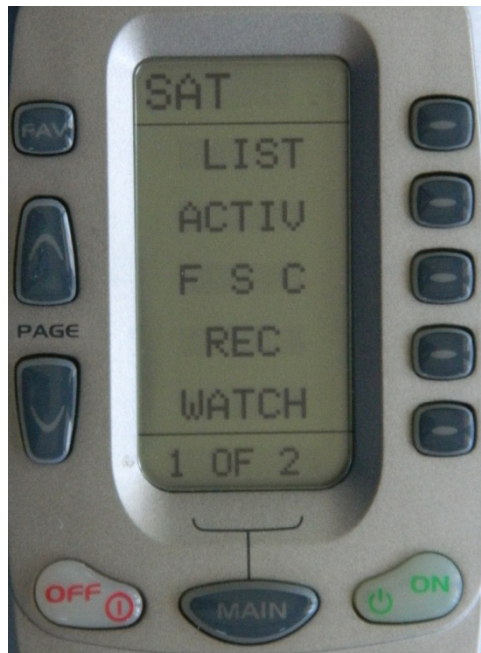

SAT buttons:



Channel and Previous Channel Buttons



Volume and Mute

SAT Buttons:




Guide Button

BLU-R Page:



Goes to

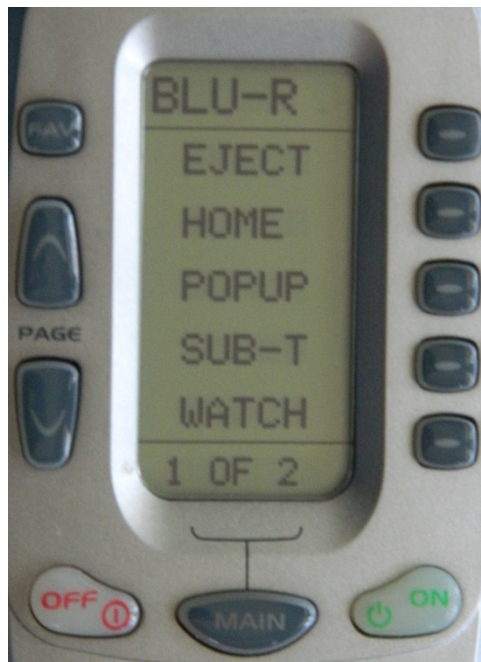

Bluray buttons:



Track + / Track -



Volume and Mute



Bluray buttons:



Play



Pause



Stop

Bluray buttons:



Scan <</>>



Menu




Exit

VCR Page:



Goes to

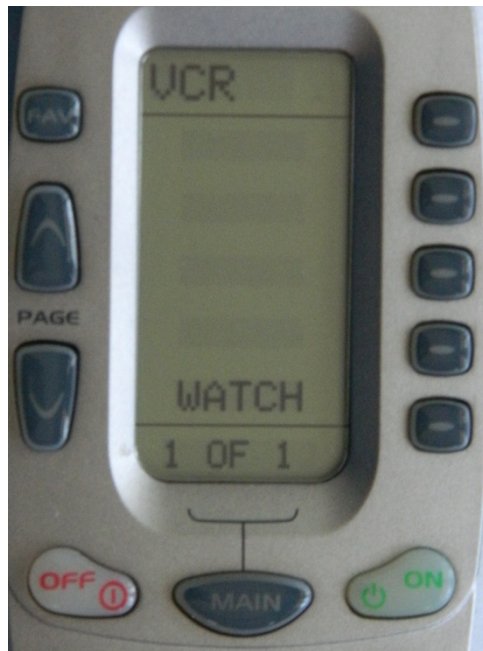

VCR buttons:



Play



Pause



Stop

VCR buttons:




Fast Forward/Rewind




Volume and Mute

DVD-C Page:

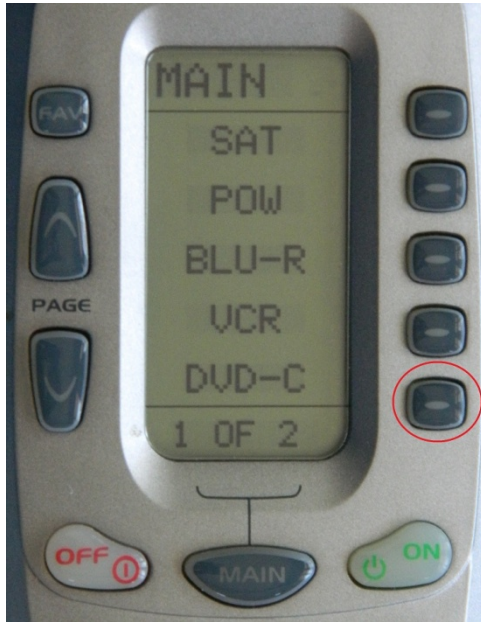

Goes to

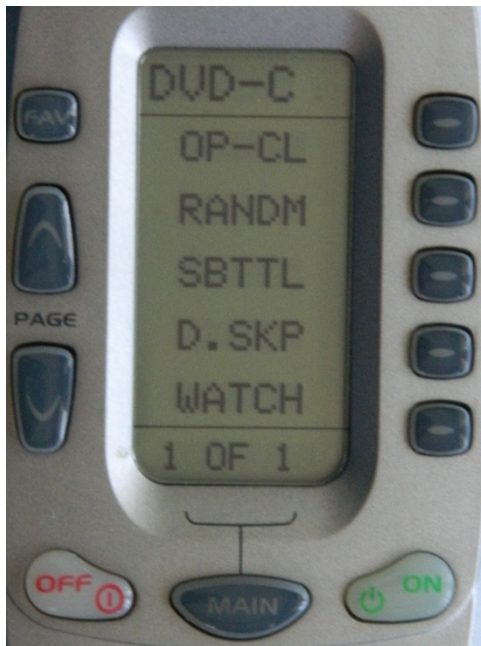

DVD-C buttons:



Track + / Track -



Volume and Mute

DVD-C buttons:



Play



Pause



Stop



DVD-C buttons:



Scan <</>>



Menu




Exit

POW Page:



Goes to

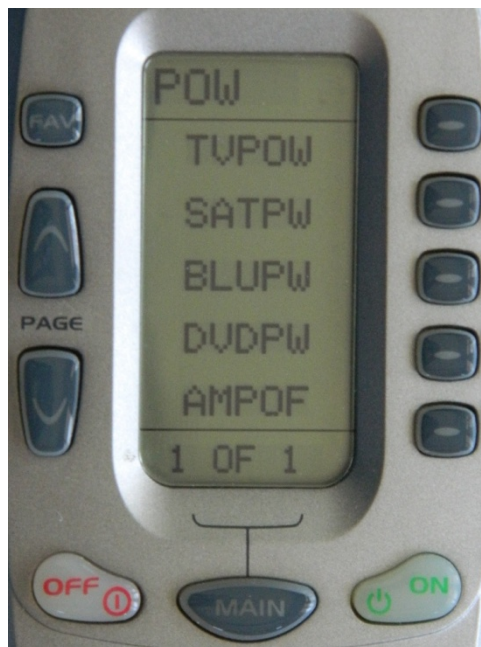

Devices should turn on automatically when used, but if something needs to be turned off or on this page will allow that.

This guide should be able to get you through basic operation of the Downstairs TV System. As with all technology, sometimes problems may arise. Please to not hesitate to call with any questions you may have:

Brett  
(858) 333-7991

[www.brettdemaria.com](http://www.brettdemaria.com)

Intentionally blank